



10" HOPPER TRAILER SWING AUGER

Simplify Unloading Your Hopper Trailer at Seeding or Harvest



Augers Manufactured by
CANCADE
COMPANY LIMITED



Auger in unload position



Auger unloading into air seeder hopper

**Direct coupler
connects auger to
trailer for "No-Spill"
attachment**

- Efficient and easy to operate
- 10" diameter for large throughput (Up to 50 bus./min. depending on hydraulic system)
- Light weight
- Built in "No-Spill System"
- Install / remove in minutes
- Mounting hardware included
- Up to 4' discharge distance from side of trailer
- One auger does the job – less weight – simple operation
- Completely removable in minutes
- Trailer can be unloaded through hoppers when auger is in transport position
- Maintain 23" ground to hopper clearance even with auger installed
- Sandblasted, epoxy primer and acrylic top coat
- Unload either hopper without moving trailer to same location at trailer side
- Universal-mount hardware allows for bolt-on installation to most trailers with minimal or no modification
- Optional hydraulic lines and valves to connect to truck, field tractor or implement

**PHONE DAKOTA TRAILER MFG., INC.
OR A DEALER NEAR YOU FOR DETAILED SPECIFICATIONS**

Your Dealer Is:



201 Pine Street • Yankton, SD 57078
Phone 605-665-8415 • Fax 605-665-0810